


Manual pre-preparation of Swep mops



Manual pre-preparation of Swep mops







 Place the mops into the box front edge first so that the finger loop faces upwards. Measure the correct amount of cleaning solution into the jug.



• Pour the measured solution into the box. The mops will become evenly damp in a few minutes. The mops are now ready for use.





Manual pre-preparation of Swep Single mops







Мор	Size	Da	amp	М	oist	Wet		
	width	1 pcs.	10 pcs.	1 pcs.	10 pcs.	1 pcs.	10 pcs.	
Swep Single HygienePlus	50 cm	0,5 dl	5 dl	1dl	10dl			
Swep Single MicroTech	35 cm	0,5 dl	5 dl	1 dl	10 dl	2,5 dl	25 dl	
	50 cm	1 dl	10 dl	2,5 dl	25 dl	4 dl	40 dl	
	75 cm	1,5 dl	15 dl	3,5 dl	35 dl			
Swep Single MicroPlus	35 cm	0,25dl	2,5dl	0,5	5dl			
	50 cm	0,5 dl	5 dl	1 dl	10 dl			
Swep Single MicroCombi	50 cm	1 dl	10 dl	1,5 dl	15 dl			
	120 cm	2 dl	20 dl					
Swep Single Wall & Interior mop	35 cm	0,25 dl	2,5 dl	0,5 dl	5 dl	-	-	
Swep Single Finnmopp	50 cm	1 dl	10 dl	2,5 dl	25 dl	4 dl	40 dl	
Swep Single Extramopp	50 cm	1 dl	10 dl	2,5 dl	25 dl	4 dl	40 dl	

Recommended maximum amount of cleaning detergent solution in different methods





Manual pre-preparation of Swep Duo mops







Recommended maximum amount of cleaning detergent solution in different methods

Мор		Damp		Moist		Wet	
	width	1 pcs.	10 pcs.	1 pcs.	10 pcs.	1 pcs.	10 pcs.
Swep Duo HygienePlus Swep Duo MicroPlus	35 cm	0,5 dl	5 dl	1 dl	10 dl		
Swep Duo MicroTech Swep Duo MicroCombi	50 cm	1 dl	10 dl	2,5 dl	25 dl	4 dl	40 dl
Swep Duo Allround	75 cm	1,5 dl	15 dl	3 dl	30 dl		
Swep Duo Wall & Interior mop	35 cm	0,5 dl	5 dl	1 dl	10 dl	-	-
Swep Duo MicroFinn	50 cm	1,5 dl	15 dl	3 dl	30 dl	4 dl	40 dl
Swep Squeegee mop	50 cm	0,5	5 dl	1,5	15 dl	2,5 dl	25 dl




a brand of FREUDENBERG

How to use the special task Swep mops





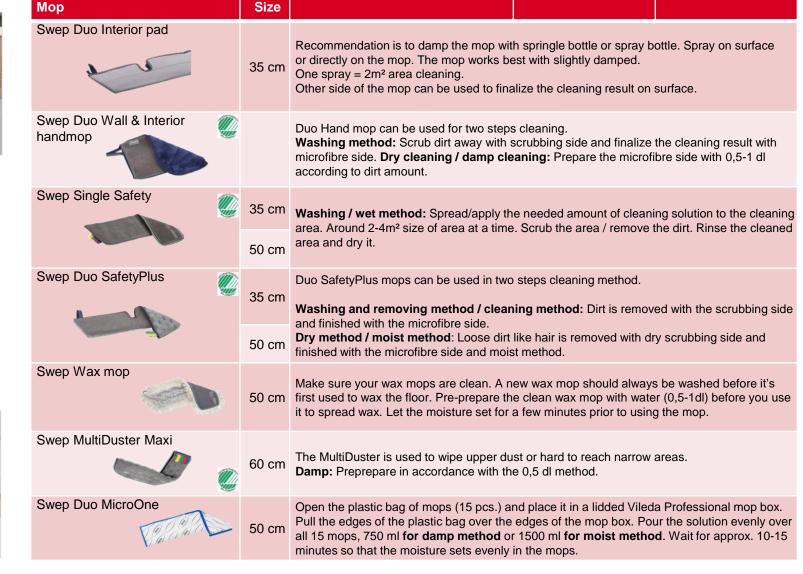

a brand of FREUDENBERG

